



tape measure



angle finder



scraper



table/circular saw



painters tape



construction adhesive



caulk gun

STEP 1

Carefully measure width and depth of the step. Then cut (*decor up*) your **BestTread™** to size and dry-fit to ensure a proper fit.

(Measure and cut each stair/tread separately as they may be different. Steps may not all be square.)

PRO TIP


Use painter's tape on the cut line before cutting to prevent chatter at the cut edge of your **BestTread™**.

BEFORE YOU BEGIN

Remove any carpet, staples, etc. from your stairs

STEP 2

Apply roughly a 1/4" bead of **urethane construction adhesive** about 1" from the edges and in a serpentine pattern with approx. 1.5" of space between each line. **Add a generous amount of adhesive into the bullnose as well.**

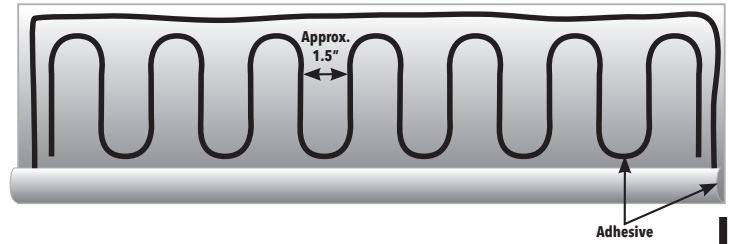

STEP 3

Starting at the bottom step, carefully position **BestTread™** on step approx. 1" from the riser and slide into place. Apply firm pressure to tread surface and follow adhesive manufacturers application guidelines. **Remove any excess adhesive immediately! Allow sufficient dry time (as recommended by adhesive manufacturer) before using your steps.**

PRO TIP

We recommend securing the back end with finishing nails until the construction adhesive cures.

IF YOUR EXISTING STAIR TREAD HAS A SQUARE END (NO BULLNOSE) FOLLOW THE PLACEMENT PROCEDURE BELOW:

